
HCE1010A/W, HCE1410A/W, HME1010A/W, HME1410A/W Horizon Elite[™] 230 V/50 Hz Ice Machines (Self-contained)

Order parts online www.follettice.com

Operation and Service Manual



Following installation, please forward this manual to the appropriate operations person.

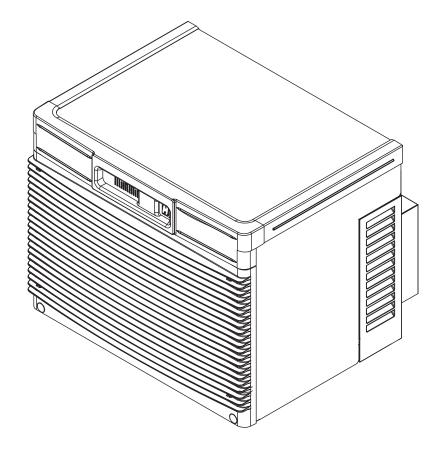

801 Church Lane • Easton, PA 18040, USA Toll free (877) 612-5086 • +1 (610) 252-7301 www.follettice.com

CAUTION!

- This appliance should be connected by a qualified person in accordance with application codes.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- · Connect to potable water supply only.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used for household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- WARNING! To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- Warranty does not cover exterior or outside installations.
- Moving parts. Do not operate with front cover removed.
- Hot parts. Do not operate with cover removed.
- To reduce risk of shock, disconnect power before servicing.
- To prevent circuit breaker overload, wait 15 minutes before restarting this unit. This allows the compressor to equalize and the evaporator to thaw.
- Drain line must be vented.
- Water supply must be treated by a scale-inhibiting filter.
- Most ice machine cleaners contain citric or phosphoric acid, which can cause skin irritation. Read caution label on product and follow instructions carefully.
- Ice is slippery. Maintain counters and floors around dispenser in a clean and ice-free condition.
- Ice is food. Follow recommended cleaning instructions to maintain cleanliness of delivered ice.

Contents

Welcome to Follett.	. 4
Before you begin	. 4
Specifications	. 5
Electrical	. 5
Plumbing	
Ambient	
Heat rejection	
Dimensions and clearances	
Operation	
Cleaning/sanitizing and preventive maintenance (all models)	
Service	
Ice machine operation (all models)	
"Bin full" detection system.	
Compressor data	
Gearmotor data	
Fan motor data	
Mechanical System	
Evaporator disassembly	
Evaporator reassembly	
5 <i>y</i>	
Troubleshooting	
Replacement parts	
Evaporator assembly	
Air-cooled assembly	
Water-cooled assembly.	
Electrical box	
Integration kit – top-mount and RIDE remote ice delivery	
Onino asseniuiy	42

Welcome to Follett

Follett equipment enjoys a well-deserved reputation for excellent performance, long-term reliability and outstanding after-the-sale support. To ensure that this equipment delivers the same degree of service, we ask that you review the installation manual (provided as a separate document) before beginning to install the unit. Our instructions are designed to help you achieve a trouble-free installation. Should you have any questions or require technical help at any time, please call our technical service group at (877) 612-5086 or +1 (610) 252-7301.

Before you begin

After uncrating and removing all packing material, inspect the equipment for concealed shipping damage. If damage

is found, notify the shipper immediately and contact Follett Corporation so that we can help in the filing of a claim, if necessary.

Check your paperwork to determine which model you have. Follett model numbers are designed to provide information about the type and capacity of Follett equipment. Following is an explanation of the different model numbers in the series.

	Icemaker	Voltage	Series	Condenser	Application	Configuration					
НС	Maestro™ Chewblet® (400 Series) Horizon Chewblet (1000, 1400, 1650 Series) Horizon Micro Chewblet	 C 208-230/60/1 (icemaking head) Self-contained only. D 115/60/1 (icemaking head) Self-contained and remote. If remote unit, high side is 208-230/60/1. E 230/50/1 (icemaking head) Self-contained only. F 115/60/1 (icemaking head) Remote only. High side is 208-230/60/3. 	400 up to 454 lbs (206kg) 1000/1010 up to 1036 lbs (471kg) 1400/1410 up to 1450 lbs (658kg) 1650 up to 1580 lbs (717kg)	 A Air-cooled, self-contained W Water-cooled, self-contained R Air-cooled, remote condensing unit N Air-cooled, no condensing unit for connection to parallel rack system 	V Vision™ H Harmony™ B Ice storage bin J Drop-in M Ice Manager diverter valve system	S RIDE™ (<i>RIDE remote</i> <i>ice delivery</i> <i>equipment</i>) T Top-mount					

Chewblet® Ice Machine Model Number Configurations

Specifications

Electrical

Each ice machine requires its own separate circuit with electrical disconnect within 10 ft (6m). Equipment ground required.

Standard electrical:

- HCE1010: 230/50/1 (6 ft (2m) cord)
- HME1410: 230/50/1 (6 ft (2m) cord)
- Amperage: 1010A/W XA, 1410A/W - XA

Plumbing

This equipment to be installed with adequate backflow protection to comply with applicable federal, state, and local codes.

- 3/8" OD push-in water inlet (connection inside machine) 3/8" OD tubing required
- 3/4" MPT drain
- 1/4" FPT condenser inlet (water-cooled condenser only)
- 1/4" FPT condenser drain (water-cooled condenser only)

Notes:

- 3/4" non-vented drain line must slope a minimum of 1/4" per foot (6 mm per 30.4 cm run).
- Drain to be hard piped and insulated.
- Separate drains for ice machine and condenser.
- Water shut-off recommended within 10 feet (3m).
- Water supply must have particle filtration. Follett recommends the filter system that has integral scale inhibitors. (Follett item# 00130286).
- Follett does not recommend the use of water softeners or bowl scale inhibitors.

Ambient

Air temperature	100 F/38 C max.	50 F/10 C min.
Water temperature	90 F/32 C max.	45 F/7 C min.
Water pressure – potable	70 psi max. (483 kPa)	10 psi min. (89 kPa)

Note: Water-cooled condenser pressure 150 psi (1034 kPa)

Heat rejection

	1010	1410
Air-cooled	11,300 BTU/hr	16,000 BTU/hr
Water-cooled	12,800 BTU/hr	16,400 BTU/hr

Ice production

Note: Water regulating valve set to maintain a 260 PSIG (95 F Saturated R404A) discharge pressure at all conditions.

Am	Ambient Air Temperature F/C									
	F	60	70	80	90	100				
	С	16	21	27	32	38				
	50	1160	1061	962	825	688	lbs			
E/C	10	526	481	436	374	312	kg			
ture	60	1093	1001	909	795	681	lbs			
era	16	496	454	412	361	309	kg			
	70	1026	941	857	765	674	lbs			
r Te	21	465	427	389	345	306	kg			
/ate	80	971	893	815	730	644	lbs			
e V	27	440	405	370	331	292	kg			
Potable Water Temperature	90	917	845	773	694	614	lbs			
Ъ	32	416	383	351	315	279	kg			

1010 Air-cooled ice machine capacity/24 hrs.

1410 Air-cooled ice machine capacity/24 hrs.

Am	Ambient Air Temperature F/C										
	F	60	70	80	90	100					
	С	16	21	27	32	38					
	50	1593	1466	1339	1230	1121	lbs				
F/C	10	723	665	609	558	508	kg				
ture	60	60 1518		1275	1163	1052	lbs				
era	16	689	633	578	528	477	kg				
du	70	1442	1327	1211	1097	982	lbs				
r Te	21	654	602	549	498	445	kg				
/ate	80	1394	1272	1150	1050	950	lbs				
e V	27	632	577	522	476	431	kg				
Potable Water Temperature	90	1345	1217	1089	1004	918	lbs				
Ро	32	610	552	494	455	416	kg				

1010 Water-cooled ice machine capacity/24 hrs.


Eva	Evaporator Potable Water Temperature F/C										
υ	F	50	60	70	80	90					
F/C	С	10	16	21	27	32					
nre	50	1096	1006	917	874	831	lbs				
erat	10	497	456	416	396	377	kg				
be	60	1043	970	898	850	807	lbs				
Ter	16	473	440	407	386	366	kg				
ter	70	1001	938	874	826	778	lbs				
Wa	21	454	454	425	396	375	353	kg			
ser	80	947	888	830	787	745	lbs				
enŝ	27	430	403	376	357	338	kg				
Condenser Water Temperature	90	892	839	786	749	712	lbs				
ŭ	32	405	381	357	340	323	kg				

1410 Water-cooled ice machine capacity/24 hrs.

Am	Ambient Air Temperature F/C										
0	F	F 50 60		70	80	90					
E/C	С	10	16	21	27	32					
iure	50	1393	1374	1335	1278	1201	lbs				
erat	10	632	623	606	580	545	kg				
Water Temperature	60	1368	1326	1284	1216	1147	lbs				
Ter	16	621	601	582	552	520	kg				
ter	70	1343	1278	1213	1153	1093	lbs				
Wa	21	609	580	550	523	496	kg				
ser	80	1328	1268	1207	1135	1063	lbs				
ens	27	602	575	547	515	482	kg				
Condenser	90	1313	1257	1201	1116	1032	lbs				
ŭ	32	596	570	545	506	468	kg				

Dimensions and clearances

- Entire front of ice machine must be clear of obstructions/connections to allow removal.
- 1" (26mm) clearance above ice machine for service.
- 1" (26mm) minimum clearance on sides.
- The intake and exhaust air grilles must provide at least 250 sq in (1615 sq cm) of open area.
- Air-cooled ice machines 18" (458 mm) minimum clearance between discharge and air intake-grilles.

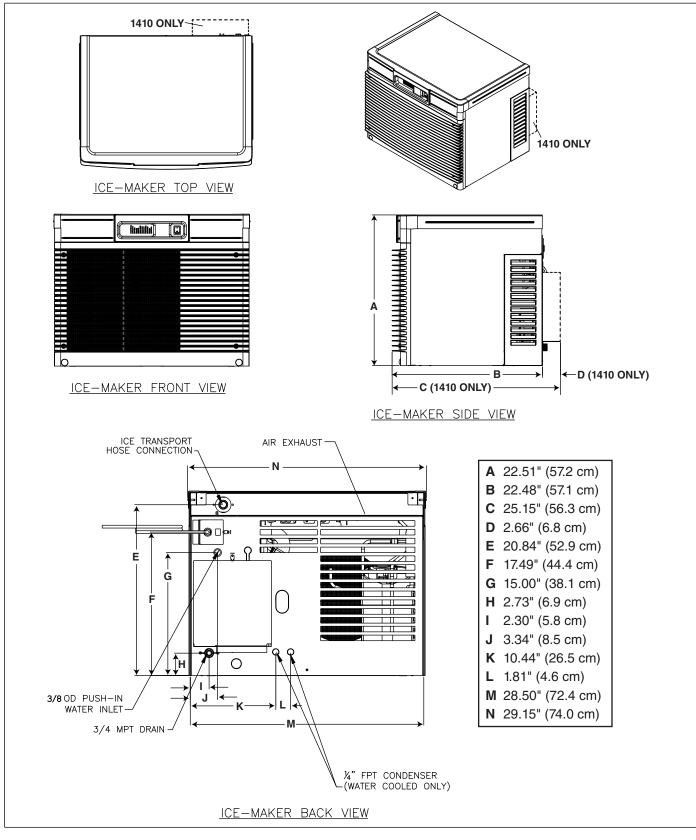

Operation

Cleaning/sanitizing and preventive maintenance (all models)

Note: Do not use bleach to sanitize or clean the icemaker.

Preventive maintenance

Periodic cleaning of Follett's icemaker system is required to ensure peak performance and delivery of clean, sanitary ice. The recommended cleaning procedures that follow should be performed at least as frequently as recommended, and more often if environmental conditions dictate.

Cleaning of the condenser can usually be performed by facility personnel. Cleaning of the icemaker system, in most cases, should be performed by your facility's maintenance staff or a Follett authorized service agent. Regardless of who performs the cleaning, it is the operator's responsibility to see that this cleaning is performed according to the schedule below. Service problems resulting from lack of preventive maintenance will not be covered under the Follett warranty.


Weekly exterior care

The exterior may be cleaned with a stainless cleaner such as 3M Stainless Steel Cleaner & Polish or equivalent.

Monthly condenser cleaning (air-cooled icemaker only)

- 1. Use a vacuum cleaner or stiff brush to carefully clean condenser coils of air-cooled icemakers to ensure optimal performance.
- 2. When reinstalling counter panels in front of remote icemakers, be sure that ventilation louvers line up with condenser air duct.

Semi-annual evaporator cleaning (every 6 months)




• Wear rubber gloves and safety goggles (and/or face shield) when handling ice machine cleaner or sanitizer.

- Use only Follett approved SafeCLEAN Plus™ cleaning/sanitizing solution (part #01050863).
- DO NOT USE BLEACH.
- It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling.
- Read and understand all labels printed on packaging before use.

Note: Complete procedure for cleaning an sanitizing MUST be followed. Ice must be collected for 10 minutes before putting ice machine back into service.

1. Press the CLEAN button. The machine will drain. The auger will run for a short time and then stop. Wait for the LOW WATER light to come on.


Fig. 1

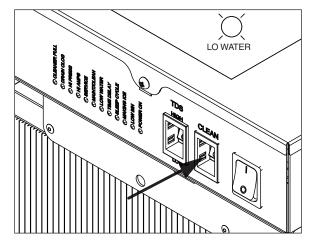

- Mix 1 gal. (3.8L) 120 F (49 C) water and one 7 oz. (198 g) packet of Follett SafeClean Plus (P/N 01050863).
- **3.** Using a 1 quart (1L) container, slowly fill cleaning cup until CLEANER FULL light comes on. Do not overfill.
- **4.** Place one Sani-Sponge[™] in remaining sanitizing and cleaning solution and retain for Step 9.

Note: Do not use bleach to sanitize or clean the icemaker.

5. Replace cover on cleaner cup. Machine will clean, then flush 3 times in approximately 15 minutes. Wait until machine restarts.

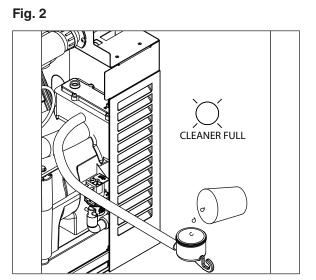




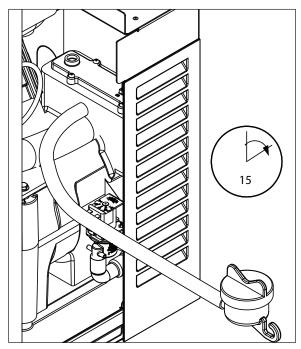


Fig. 4

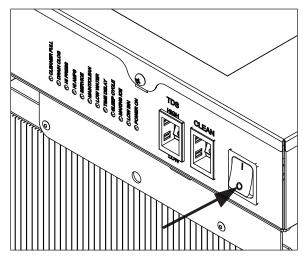

6. To clean/sanitize ice transport tube – Press power switch OFF

7. Disconnect coupling as shown.

- **8.** Using disposable food service grade gloves, insert dry Sani-Sponge.
- **9.** Insert Sani-Sponge soaked in SafeClean Plus (from Step 4).
- **10.** Push both Sani-Sponges down ice transport tube with supplied pusher tube.



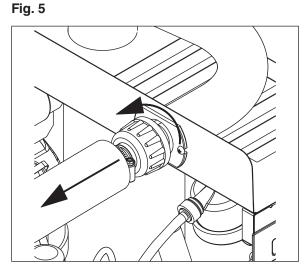


Fig. 6



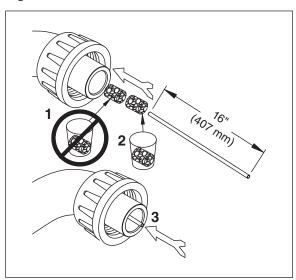

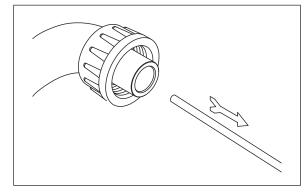

11. Remove and discard 16 inch (407 mm) pusher tube.

- **12.** Reconnect coupling. Press power switch ON. Ice pushes Sani-Sponges through ice transport tube.
- Fig. 8



- **13.** Place a sanitary (2 gal. or larger) container in bin or dispenser to collect Sani-Sponges and ice for 10 minutes.
- **14.** Collect 5.5 lbs (3 kg) of ice from unit. Discard ice and Sani-Sponges.

Service

Ice machine operation (all models)

Follett's ice machine consists of five distinct functional systems covered in detail as follows:

- Water system
- Electrical control system
- Mechanical assembly
- Refrigeration system
- Bin full


The Horizon ice machine overview

The Follett Horizon ice machine uses a horizontal, cylindrical evaporator to freeze water on its inner surface. The refrigeration cycle is continuous; there is no batch cycle. The evaporator is flooded with water and the level is controlled by sensors in a reservoir. A rotating auger (17 RPM) continuously scrapes ice from the inner wall of the evaporator. The auger moves harvested ice through the evaporator into an ice extrusion canal. The ice is forced through a restrictive nozzle that squeezes out the water and creates the Chewblet. The continuous extrusion process pushes the Chewblets through a transport tube into a dispenser or bin.

A solid state PC board controls and monitors the functionality of the ice machine. In addition to sequencing electrical components, the board monitors various operational parameters. A full complement of indicator lights allows visual status of the machine's operation. Additionally, the PC board controls the self-flushing feature of the ice machine. The evaporator water is periodically drained and replenished to remove minerals and sediment.

A unique "bin full" detection system is incorporated in the Horizon ice machine. A switch located at the ice discharge port of the machine detects the position of the transport tube. When the bin fills up with ice, the transport tube moves out of the normal running position, and the switch turns the ice maker off. A domed housing at the end of the transport tube contains the ice extrusion loads during shut down.

Harvest system diagram

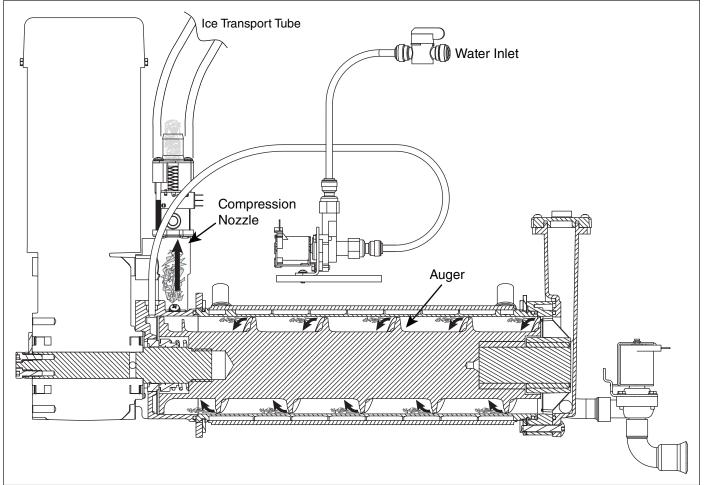


Water system

The water level in the evaporator is controlled by a feed solenoid and level detecting sensors. Referencing the diagram below, water sensing probes extend down into the reservoir at the end of the evaporator assembly. The system works via electrical conductivity as follows:


The probe labeled B is the common. When water is between any of the other probes and the common, the PC board will sense the activation. During normal operation, the water level rises and falls between the Normal High and Normal Low probes. As water is consumed to make ice, the level will fall until the Normal Low probe is exposed, triggering the water feed solenoid on. Water will fill until the Normal High sensor is activated.

Note: The potable water total dissolved solids (TDS) content must be greater than 10 ppm for the water control system to function properly. If using reverse osmosis water filtration system, ensure TDS level is greater than 10 ppm.

Water system diagram

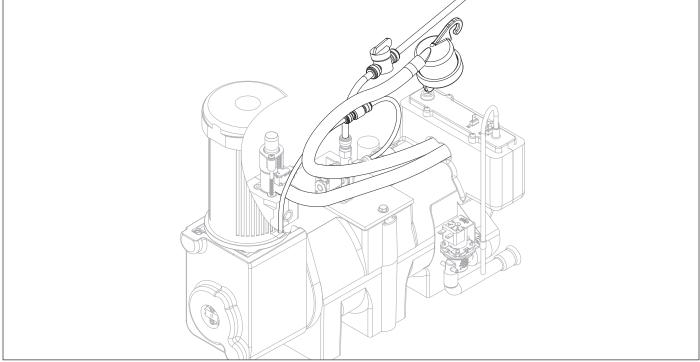


Water level diagram

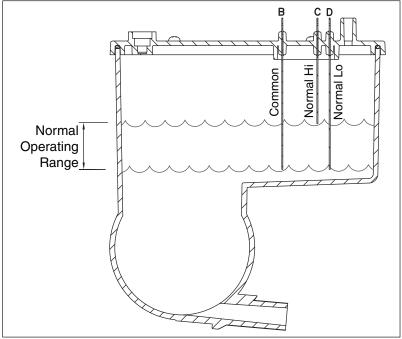


"Bin full" detection system

The Follett Horizon ice machine incorporates a unique "bin full" detection system that consists of the shuttle and actuator. The shuttle incorporates a flag and switch. Referencing the figure below, the normal running position of the flag is down, and the switch is closed. When the bin fills to the top and ice can no longer move through the tube, the machine will force the shuttle flag up, opening the switch and shutting the machine off. The shuttle actuator, located above the ice bin allows the ice to curl up within it when the bin is full. In this way, there are no loads generated that would tend to lift off the lid of the bin.

Shuttle flag and sensor

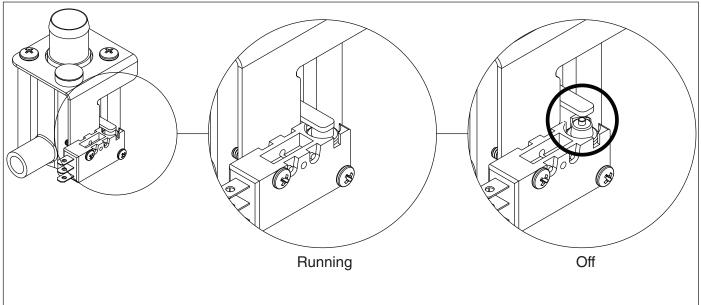

Shuttle actuator

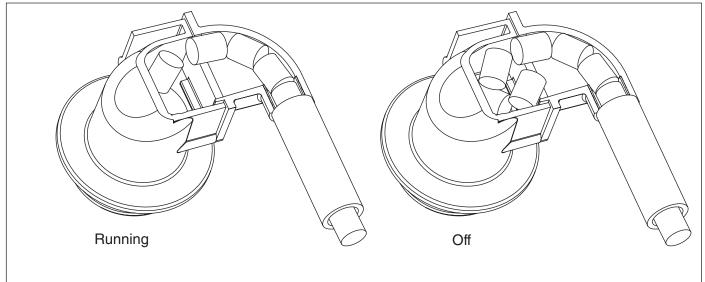

Electrical system



ATTENTION!

To prevent circuit breaker/Hi-amp overload, wait 5 minutes before restarting this unit. This allows the compressor to equalize and the evaporator to thaw.


Normal control board operation

The PC board indicator lights provide all the information necessary to determine the machine's status. Green indicator lights generally represent "go" or normal operation; Yellow indicators represent normal off conditions; Red indicators generally represent alarm conditions, some of which will lock the machine off.

A flashing green light labeled POWER indicates power to the machine. All other normal operation status indicators are covered as follows:

Ic	e machine disposition		Op	perating conditions	
	Legend: ON O	OFF ON or OF	F	TLASHING]
1.	Ice machine is making cleaner full hi press hi rand service cow water nor used not used	MAKING ICE LOW BIN POWER ON	1.	Normal running.	
2.	CLEANER FULL DRAIN CLOG HI PRESS HI AMPS SERVICE MAINT/CLEAN LOW WATER NOT USED	MAKING ICE. ● LOW BIN ● POWER ON ■ POWER ON ■ CE	2.	Normal time delay. When the bin fills wir light goes out momentarily and the refrig drive systems immediately shut down. (N will continue to run for 10 minutes to cool DELAY light comes on, initiating the time time delay expires, the machine will resta BIN light is on.	eration and auger ote: The fan motor I condenser) The TIME delay period. When the

DIP Switch Settings

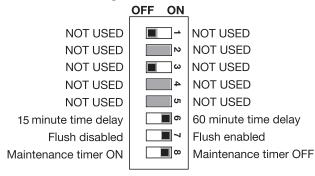

Error faults:

The Horizon PC board monitors various operating parameters including high pressure, auger gearmotor amperage limits, clogged drain, and low water alarm conditions. There are three types of errors namely "soft" (time delay) "hard" (reset), and "run".

- Soft errors will automatically reset after the 1 hour time delay or can be reset by cycling power.
- Hard errors must be reset on the control board.
- Run errors will give an indication of a problem, but will allow continuous normal operation.

Soft errors:

HI AMPS: The PC board monitors the amperage of the auger motor. Should the gear motor experience current draw above the allowable limit, the machine will shut down and the TIME DELAY and HI AMP will be illuminated. After the time delay the machine will restart and the TIME DELAY and HI AMP will clear.

LO WATER: During operation, the water level cycles between the normal low and normal high sensors. Should the water be shut off to a running machine, a soft error will occur. The error sequence is as follows: During operation, the water level falls to the normal low sensor, and when it does the water feed solenoid is energized. If water is not detected at the normal low sensor within 10 seconds, a soft error will occur. The machine will shut down, but the water feed solenoid will remain energized. Should water return, it will fill to the normal low sensor and the machine will resume normal operation. The error will clear automatically.

HI PRESSURE: Should the refrigeration pressure rise above 425 psi, the machine will shut down and the TIME DELAY and HIGH PRESSURE will be illuminated. After the time delay, and if the pressure has fallen back below the reset point of 295 psi, the machine will restart and the TIME DELAY and HIGH PRESSURE will clear.

Hard error:

DRAIN CLOG: The drain clog sensor, located in the chassis will detect the presence of water just below the top edge of the chassis. After the sensors are dired off, the machine must be reset on the control board to resume operation.

Run errors:

DRAIN CLOG: When the machine shuts down on a full bin and there has been 30 minutes of cumulative compressor run time, the machine will purge before starting. During this purge, if water does not get below the low probe in the reservoir within 20 seconds, the Drain Clog LED will light. The machine will continue to run but this is an indication of a poorly draining machine and must be addressed.

Relay output indication:

Each relay on the board has an indicator light associated with its output. For example, when the relay for the water feed solenoid is energized, the adjacent indicator light glows green.

Evaporator flushing sequence:

During operation, the purge solenoid will open in order to drain water. There are two drain settings to choose from: High TDS or Low TDS. (There is a rocker switch behind the front cover of the machine.) The intent is to drain the Total Dissolved Solids from the machine while it makes ice.


While ice is being made, the TDS of the water in the evaporator increases in TDS concentration. Without periodic draining, the TDS levels will climb to very detrimental levels, levels that will cause scale to form and cause poor machine operation. The Low TDS setting will allow the machine to operate for one hour before going through the flushing sequence; the High TDS setting will allow the machine to run for 10 minutes before going through the flushing sequence.

The flushing sequence toggles the purge and fill solenoids three times. That is, the purge solenoid will energize until the water level drops below the low probe. The fill solenoid then energizes until water reaches the high probe, and so on for 3 cycles.

Typically, High TDS might be considered levels above 200 PPM, but local experience and varying water chemistry may compel a High TDS setting for best performance in even lower TDS levels.

Off cycle: At the completion of off-cycle time delay, the machine checks for a cumulative 30 minutes of ice making time since the last **off-cycle** flush. If the cumulative ice making time exceeds 30 minutes, the machine will open the drain valve for 60 seconds to drain the evaporator in its entirety. It will then refill with water and begin making ice. If the ice making time is less than 30 minutes, the machine will start and begin making ice without draining the evaporator.

Wiring diagram

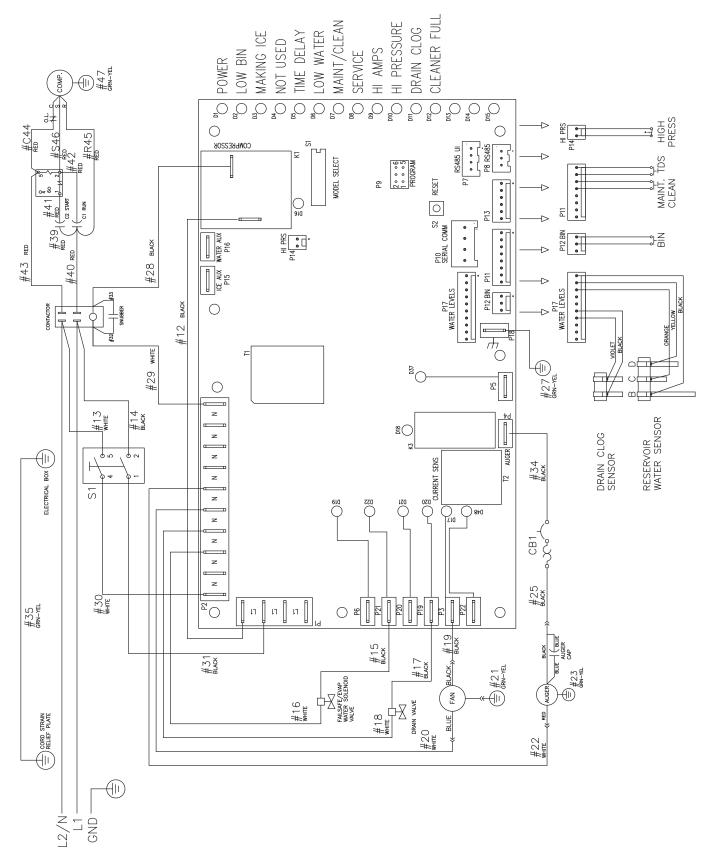

Compressor data

	1010	1410
Compressor current draw at 208-230 VAC, 90 F/32.2 C	8A	12.1A
Locked rotor amps@ 208-230 V	51A	83A
Compressor start winding (208-230 V)	4.04Ω	2.49Ω
Compressor run winding (208-230 V)	1.46Ω	0.81Ω

Gearmotor data

Gearmotor current2.0A @ 208-230 VGearmotor torque-out(high amp) trip point:Locked rotor amps2.8A @ 208-230 V

2.8A @ 208-230 V

Resistance of windings

208-230 vac gearmotor (Brother): Red to black: 12Ω Blue to red: 12Ω Blue to black: 24Ω

Fan motor data

Fan motor current 1.2A @ 208-230 V Fan motor 100 Ω

Mechanical System

Evaporator disassembly

- 1. Press CLEAN button to purge evaporator. Turn power OFF when LO WATER lights.
- **2.** Unscrew and disconnect transport tube from louvered docking assembly.



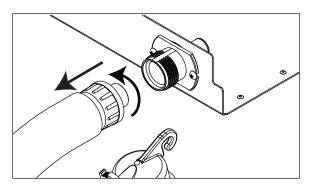





Fig. 10



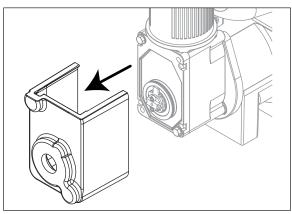

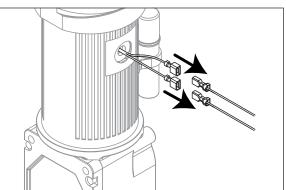



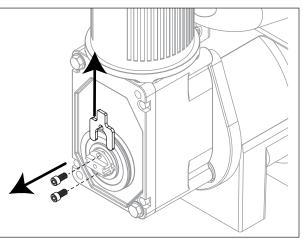

3. Remove gearbox insulation.

4. Disconnect gear motor wires.

5. Remove screws (with 3/16" allen wrench) and auger retaining fork:

6. Remove gear motor bolts (9/16" wrench).

8. Remove main housing insulation and shuttle

insulation:

7. Remove gear motor and wipe auger shaft clean.



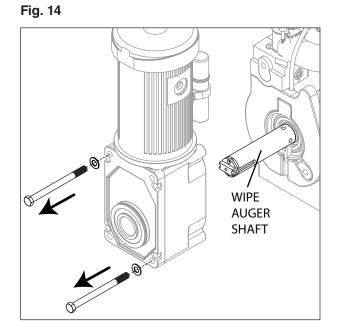


Fig. 15



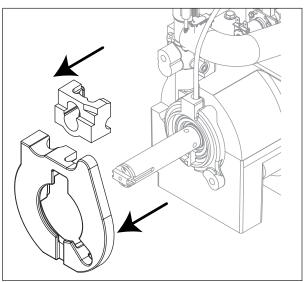

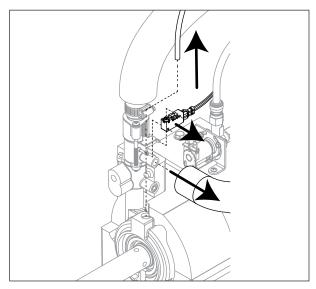

9. Remove front feed water tube from push-in fitting, shuttle drain tube, and shuttle switch.



10. Remove 3 screws (with 3/16" allen wrench) then remove auger and main housing together.

Note: Auger is sharp - wear protective gloves.

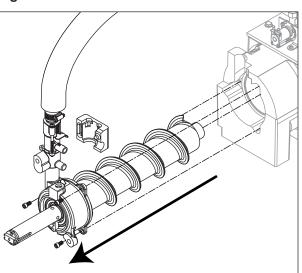


Fig. 18


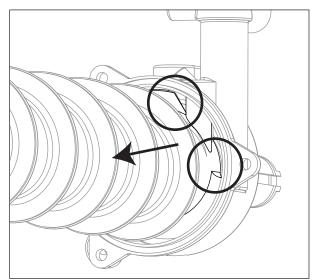


Fig. 19

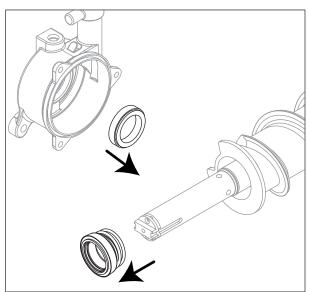

- **11.** Rotate auger to align opening in auger flange with stream divider.
- 12. Pull out auger .:

13. Remove and discard the ceramic mating ring and shaft seal.

Evaporator reassembly

14. Install ceramic mating ring and shaft seal.

Caution: Do not touch the sealed surface of either part. Oil from bare skin will cause premature seal failure.

- **15.** Use liquid hand soap on the rubber part of the ceramic seal when installing in main housing. Use supplied cardboard disc to press into recess.
- **16.** Apply liquid hand soap to raised area of auger shaft and interior rubber portion of shaft seal before installing seal.
- **17.** Clean O ring groove. Lubricate O ring with petrol-gel and reinstall.
- 18. Carefully install auger.
- **19.** Rotate auger to position shown to clear main housing stream divider.



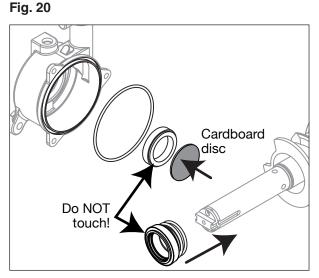


Fig. 21




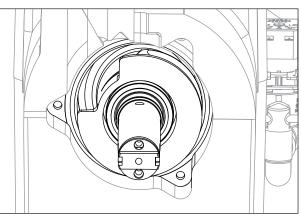

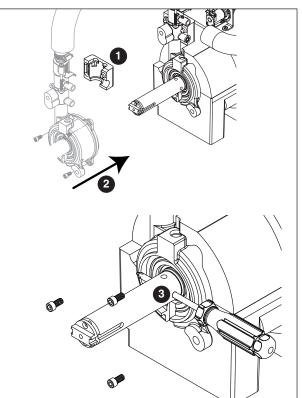


- 20. Install rear shuttle insulation (Fig. 22.1) and slide main housing (Fig. 22.2) onto auger.
- **21.** When installing new water seal, use screwdriver to compress the spring **(Fig. 22.3)**, which allows for easier installation of the three screws.


- **22.** Install shuttle switch.
 - Align holes with pins (Fig. 23.1) and depress switch button (Fig. 23.2) to clear shuttle tab.

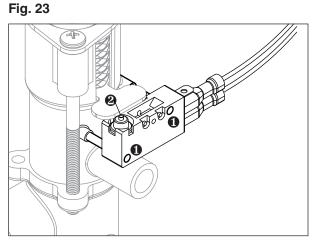



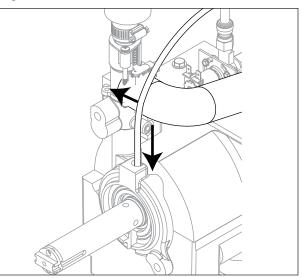



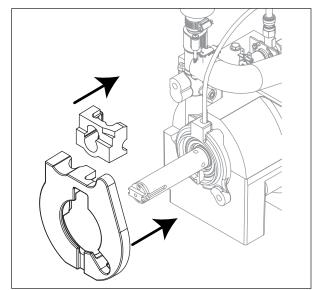

23. Install shuttle drain tube and front feed water tube (Fig. 24).

24. Install main housing insulation and shuttle insulation:25. Apply a coat of petro gel to auger shaft.


HCE1010A/W, HME1010A/W, HCE1410A/W, HME1410A/W

26. Slide gear motor onto auger and Install gear motor bolts (9/16" wrench).

- to align keyways.
- 29. Install key fully.

27. Connect gear motor wires.

30. Pry shaft forward to install retainer fork.



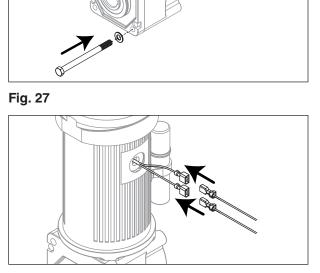


Fig. 28

Fig. 26



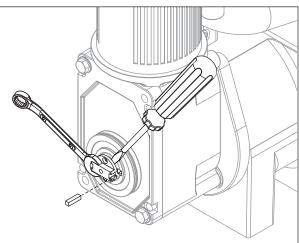


Fig. 29

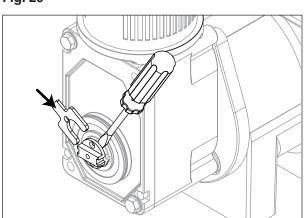

- **31.** Rotate retainer fork to align screw holes.
- 32. Install screws to secure retainer fork.

33. Install gearbox insulation..



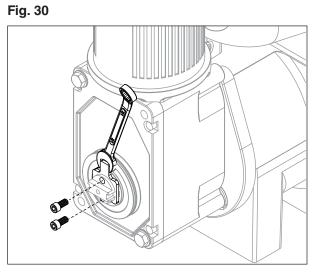


Fig. 31


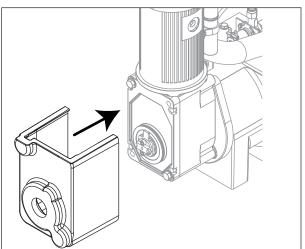


Fig. 32

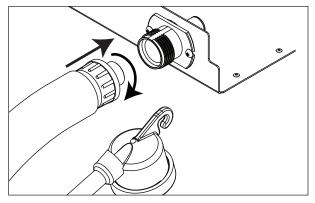


Reservoir/rear bushing disassembly Fig. 33

1. Press CLEAN button to purge evaporator. Turn power OFF when LO WATER lights.

Note: In many applications, removing the gearmotor, main housing, and auger will allow for the ice machine to be pulled out further for better access to rear components.

- 2. Slide ice machine forward to gain access.
- **3.** Use Fig. 32 as disassembly guide.
 - Note: Use petrogel when installing/reinstalling o-rings.

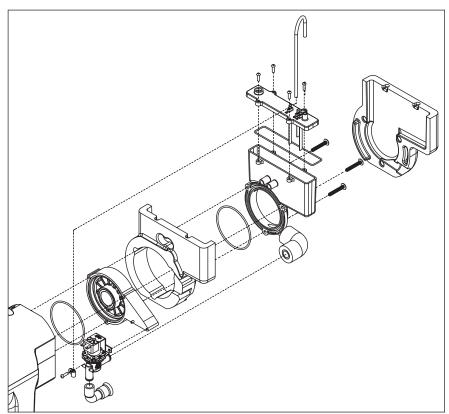

Refrigeration system

1010 - Refrigerant pressure data

Air-cooled condensers (air)	60 F/16 C	70 F/21 C	80 F/27 C	90 F/32 C	100 F/38 C
Pressure (psig) discharge/suction	190/32	225/34	258/36	292/39	325/41

Sys	System Operating Pressures (Discharge/Suction) PSIG										
Potable Water F/C											
F/C		50/10	60/16	70/21	80/27	90/32					
	50/10	260/34	260/34	260/34	260/34	260/34	psig				
Water	60/16	260/34	260/34	260/34	260/34	260/34	psig				
Iser	70/21	260/35	260/35	260/35	260/35	260/35	psig				
Condense	80/27	273/36	284/36	285/36	285/36	285/36	psig				
ပိ	90/32	285/37	288/37	290/37	290/37	290/37	psig				

Note: The water control valve is factory set to maintain 260 ± 15 psi discharge pressure @ 70 F/21 C water.


1410 - Refrigerant pressure data

Air-cooled condensers (air)	60 F/16 C	70 F/21 C	80 F/27 C	90 F/32 C	100 F/38 C
Pressure (psig) discharge/suction	235/27	275/30	315/32	355/35	395/37

System Operating Pressures (Discharge/Suction) PSIG Potable Water F/C

F/C		50/10	60/16	70/21	80/27	90/32	
	50/10	290/32	290/32	290/32	290/33	290/33	psig
Water	60/16	290/33	290/33	290/33	290/33	290/33	psig
Condenser	70/21	290/33	290/33	290/33	290/33	290/33	psig
nde	80/27	293/33	293/33	293/33	293/33	293/33	psig
ပိ	90/32	295/34	295/34	295/34	295/34	295/34	psig

Note: The water control valve is factory set to maintain 290 PSIG.

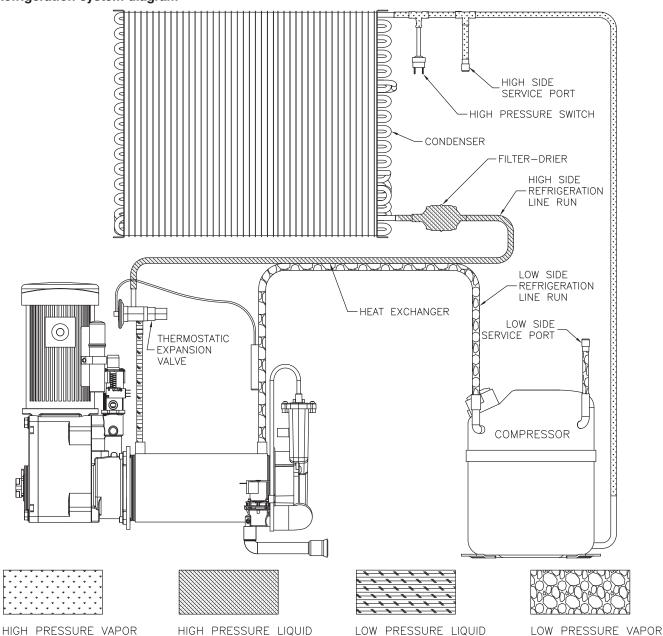

Refrigeration system diagram

Refrigeration charge

All service on refrigeration systems must be performed in accordance with all federal, state and local laws. It is the responsibility of the technician to ensure that these requirements are met. Recharging ice machine to other than factory specifications will void the warranty.

R404A ice machine charge specifications

		
Model	Charge	Refrigerant type
HCE1010A (air-cooled)	33 oz (936 g)	R404A
HCE1010W (water-cooled)	21 oz (595 g)	R404A
HCE1410A (air-cooled)	29 oz (822 g)	R404A
HCE1410W (water-cooled)	21 oz (595 g)	R404A

Refrigerant replacement requirements

- 1. Non-contaminated refrigerant removed from any Follett refrigeration system can be recycled and returned to the same system after completing repairs. Recycled refrigerant must be stored in a clean, approved storage container. If additional refrigerant is required, virgin or reclaimed refrigerant that meets ARI standard 700-88 must be used.
- 2. In the event of system contamination (for example, a compressor burn out, refrigerant leak, presence of non-condensibles or moisture), the system must be repaired, evacuated and recharged using virgin or reclaimed refrigerant that meets ARI standard 700-88.
- **3.** Follett Corporation does not approve of recovered refrigerants. Improper refrigeration servicing procedures will void the factory warranty.

Evacuation

Evacuate the system to a level of 500 microns. When the 500 micron level is reached, close all valves. Allow the system to sit for approximately 20 minutes. During this period the system pressure should not rise. If the system pressure rises and stabilizes there is moisture in the system and further evacuation is needed. If the pressure continues to rise check the system for leaks.

Ambients	Minimum	Maximum
Air temperature ¹	50 F/10 C	100 F/37.8 C
Water temperature ²	45 F/7 C	90 F/32.2 C

¹Ambient air temperature is measured at the air-cooled condenser coil inlet.

 $^{2}\mbox{Ambient}$ water temperature is measured in the ice machine water reservoir.

Ice capacity test

Ice machine production capacity can only be determined by weighing ice produced in a specific time period.

- **1.** Replace all panels on ice machine.
- 2. Run ice machine for at least 15 minutes.
- 3. Weigh and record weight of container used to catch ice.
- 4. Catch ice for 15 or 20 minutes.
- 5. Weigh harvested ice and record total weight.
- 6. Subtract weight of container from total weight.
- 7. Convert fractions of pounds to decimal equivalents (ex. 6 lbs 8oz = 6.5 lbs).
- 8. Calculate production using following formula:

 $\frac{1440 \text{ min. x wt. of ice produced}}{\text{Total test time in minutes}} = \text{Production capacity/24 hr.}$

9. Calculated amount per 24 hours should be checked against rated capacity for same ambient and water temperatures in Ice Production Tables.

Troubleshooting Please see "Service" section for a description of each function.

lce	machine disposition	Possible causes	Corrective action
	Legend: ON OFF O	N or OFF TLASHING	
1.	Ice machine is in running character of the prain close of the prain close maintrice of the prain of the prain close maintrice of the prain of the prain of the prain of the prain of the pr	 Defective compressor. Defective start relay. Defective start capacitor. Defective run capacitor. Defective main contactor. No output from PC board. 	 Replace compressor. Replace start relay. Replace start capacitor. Replace run capacitor. Replace main contactor. Replace PC board.
2.	Machine in TIME DELAY without full or cleaner full hi Press service service naking ic bower on power o	 Ice jamming due to improperly installed transport tube causing a false shuttle. Shuttle stuck in up position. Damaged or improperly installed thermostat (open). Transport tube backed-out of coupling. 	 Correct transport tube routing. Repair or replace shuttle mechanism. Replace or reposition thermostat. Correct coupling installation.
3.	Ice machine is not making ice. CLEANER FULL HI AMDS. HI AMPS SERVICE MAKING ICE MAKING ICE MAKING ICE POWER ON OF USED MAKING ICE	 Poor water quality causing ice to jam auger. Damaged shuttle mechanism. Intermittent drive output from PC board. Evaporator will freeze causing a HI AMPS error. Gearmotor is unplugged. 	 Clean ice machine. Increase flushing frequency. Position TDS switch to High TDS setting. Replace or repair shuttle mechanism. Replace PC board. Plug in gearmotor.
4.	Creaver is not making ice. HI PRESSURE. HI PRESSURE. HI AMPS HI PRESS HI AMPS SERVICE MAINTICLEAN OF LOW BIN OF LOW BIN OF DOWER ON	 High ambient temperatures >100 F (38 C). Poor ventilation or air recirculation. Clogged condenser (air-cooled). No water flow through condenser (water-cooled). Fan not working properly. No air flow. Blocked fan blades No fan output from PC board Faulty fan motor 	 Air condition area to below 100 F (38 C). Reposition ice machine or properly ventilate. Prevent ice machine exhaust from recirculating. Clean condenser grille (air-cooled). Restore water flow to condenser. Correct air flow. Remove any blockage from fan blades Replace PC board Replace fan motor
5.	CLEANER FULL CLEANER FULL DRAIN CLOG HI PRESS SERVICE MAINT/CLEAN NOT USED NOT USED MAKING ICE OW BIN OWER ON	 Internal water leak touching chassis sensor. 	 Identify and repair leak. Clean/dry chassis and sensors and restart machine.
6.	Creaner is making ice. Drain clog. HI PARS CLOG HI AMPS SERVICE MAINT/CLEAN MA	1. Improper flow in drain system.	1. Correct/clean drain system.


lce	e machine disposition	Possible causes	Corrective action
	Legend: ON OFF	ON or OFF SFLASHING	
7.	Ice machine is making ice. Excessive water in bin or coming into bin from transport tube.	 Failed water sensors. Processor assumes there is no water when there is water. Blocked reservoir vent. Defective water feed solenoid valve. Stuck in open position. 	 Clean or replace water probe assembly. Check wiring connections. Clean or replace vent tubes. Replace water feed solenoid valve.
8.	Ice machine is not making ice. To water. CLEANER FULL CLEANER MAINTGLEAN MAINTGLEAN MAINTGLEAN MAINTGLEAN MAING ICE MAINTGLEAN MAING ICE MAING ICE MAING ICE MAINTGLEAN MAING ICE MAINTGLEAN MAING ICE MAING ICE	 Water supply is insufficient. Low water pressure. Defective water feed solenoid valve. Stuck in closed position. No water feed output from PC board. Plugged screen on inlet side of fill solenoid. Plugged check valve. 	 Restore water supply and check water filters. If evaporator was completely empty the reset button may have to be pressed to restart the ice machine. Ice machine will eventually start when water reaches normal lo level. Replace water feed solenoid valve. Replace PC board. Remove and clean screen. Remove and clean.

ATTENTION!


To prevent circuit breaker overload, wait 5 minutes before restarting this unit. This allows the compressor to equalize and the evaporator to thaw.

Replacement parts


Evaporator assembly

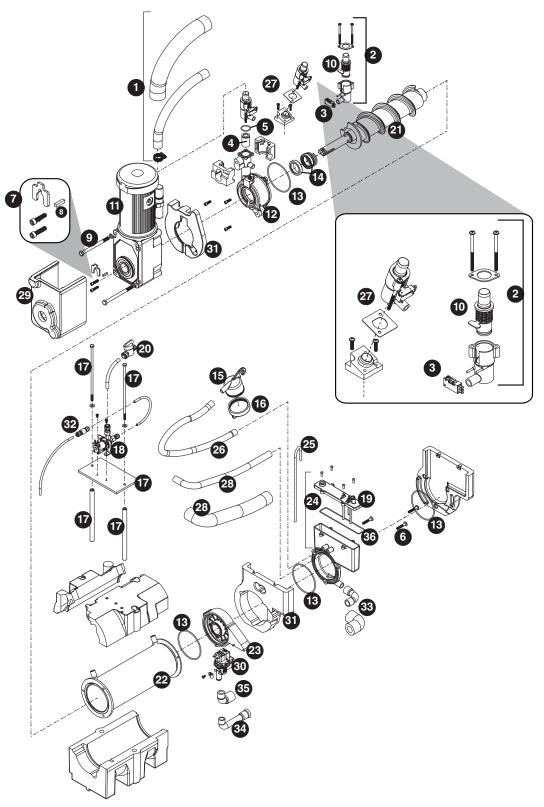


Reference #	Description	Part #
1	Tube, ice transport, insulated	01118181
2	Shuttle assembly	01118132
2	Shuttle assembly, IMDV	01118140
3	Switch, shuttle	00986083
4	Compression nozzle	01058072
5	O-ring, shuttle	01118148
6	Screw, reservoir (3 required)	01118140
7	Auger hardware (includes screws, key, retainer)	01118611
8	Key	01069913
9	Bolt, gearmotor mounting (2) (self-contained units), includes washers	01118629
10	Cartridge assembly, shuttle spring	01118033
10	Cartride, shuttle spring, IMDV	01118041
11	Gearmotor, 220 V (includes capacitor)	01118025
12	Main housing, self-contained	01117969
13	O ring	01004472
14	Seal, auger shaft	01039437
15	Cup, sanitizer	01118645
16	Cap, sanitizer	01118637
Not shown	Tubing, water, 3/8" OD	502719
Not shown	Tubing, water, 1/4" OD	502079
17	Retainer kit, evaporator	01118652
18	Solenoid, water feed (220 V)	01107515
19	Reservoir lid and sensors (includes screws and o-ring)	01118108
20	Valve, shut-off, water	502921
21	Auger, 1010 self-contained (includes seal, key, and auger hardware)	01117928 (1010 only)
21	Auger, 1410 self-contained (includes seal, key, and auger hardware)	01117936 (1410 only)
22	Evaporator, 1010	01118066 (1010 only)
22	Evaporator, 1410	01118074 (1410 only)
23	Rear bushing housing and bushing (includes (1) o-ring)	01118082
24	Reservoir assembly, water (includes lid)	01118116
25	Tube, vent (17" required)	502079
26	Tube, sanitizer	01118660
27	Kit, MicroChewblet	00997585
28	Tube, shuttle drain, insulated	01118678
29	Insulation, gearbox, 220 V	01098037
30	Solenoid, purge, 220 V	01105774
31	Insulation kit, evaporator/reservoir	01068063
32	Check valve	01122381
33	Tube, drain, reservoir, insulated	01118124
34	Tube, drain, 1010	01099662 (1010 only)
35	Tube, drain, 1410	01099654 (1410 only)
36	O-ring, reservoir lid	01085588
Not shown	Kit, scale (includes reservoir, purge solenoid, drain tubes and fitting)	01122654

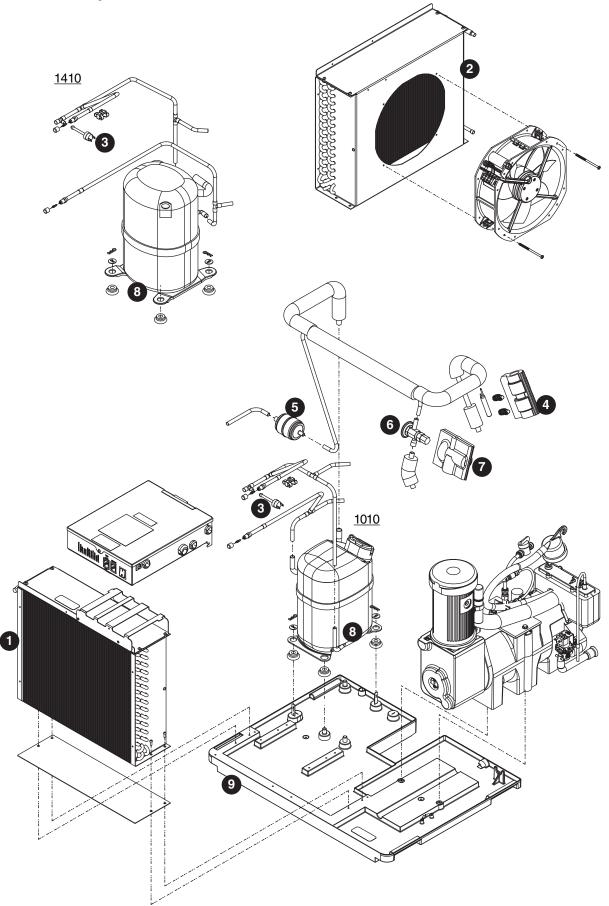

Reference #	Description	Part #
1	Condenser	01118892
2	Fan motor assembly - 220 V/60 Hz	01117803
3	Cut-out, high pressure safety	00117077
4	Insulation, bulb, TXV	00106534
5	Drier	00134593
6	Valve, expansion, thermal (includes insulation and (2) clamps)	01118942
7	Insulation, TXV (body and bulb)	502830
8	Compressor, 1010 - 230 V/50 Hz (includes start/run components and drier)	01119072 (1010 only)
8	Compressor, 1410 - 230 V/50 Hz (includes start/run components and drier)	01119098 (1410 only)
9	Base, ice machine	01117795

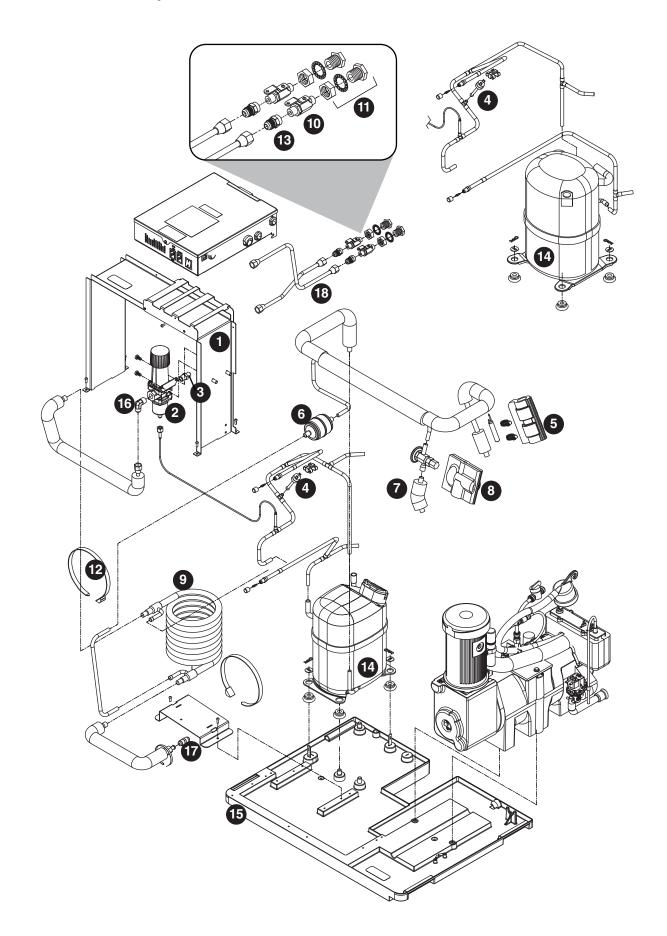


Reference #	Description	Part #
1	Electrical box support	01118934
2	Valve, water regulating	00131052
3	Union, water	202148
4	Cut-out, high pressure safety	00117077
5	Insulation, bulb, TXV	00106534
6	Drier	00134593
7	Valve, expansion, thermal (includes insulation and (2) clamps)	01118942
8	Insulation, TXV (body and bulb)	502830
9	Condenser, w/c, 1010/1410	00129502
10	Valve, shut-off, water	502222
11	Coupling	206411
12	Ty-rap	204584
13	Fitting, flared adapter	00996876
14	Compressor, 1010 - 230 V/50 Hz (includes start/run components and drier)	01119072 (1010 only)
14	Compressor, 1410 - 230 V/50 Hz (includes start/run components and drier)	01119098 (1410 only)
15	Base, ice machine	01117795
16	Elbow	00129486
17	Coupling, 3/8" double flare	01039494
18	Tubes, condenser inlet and exit	01122373

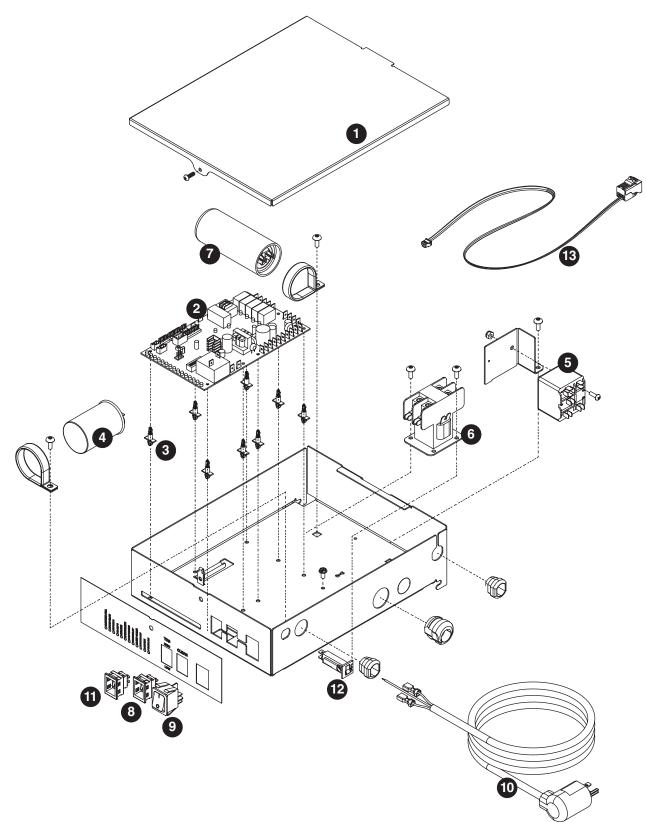


Reference #	Description	Part #
1	Cover, electrical box, air/water-cooled	01118967
2	Board, control, 220 V (includes stand-offs)	01117811
3	Stand-offs (set of 8)	00130906
4	Capacitor, compressor run - 230 V/50 Hz, 1010	00121814 (1010 only)
4	Capacitor, compressor run - 230 V/50 Hz, 1410	00141689 (1410 only)
5	Relay, compressor starting - 230 V/50 Hz, 1010	00141648 (1010 only)
5	Relay, compressor starting - 230 V/50 Hz, 1410	00157131 (1410 only)
6	Contactor - 230 V/50 Hz	00117010
7	Capacitor, compressor starting - 230 V/50 Hz, 1010	00141663 (1010 only)
7	Capacitor, compressor starting - 230 V/50 Hz, 1410	00133504 (1410 only)
8	Switch, evaporator clean	00117036
9	Switch, ice machine power	208867
10	Cord, power, 230 V, 1010	01111509 (1010 only)
10	Cord, power, 230 V, 1410	01111517 (1410 only)
11	Switch, TDS	00114371
12	Circuit breaker, 4A	00126912
13	Cable, IMDV	01071596

Integration kit – top-mount and RIDE remote ice delivery

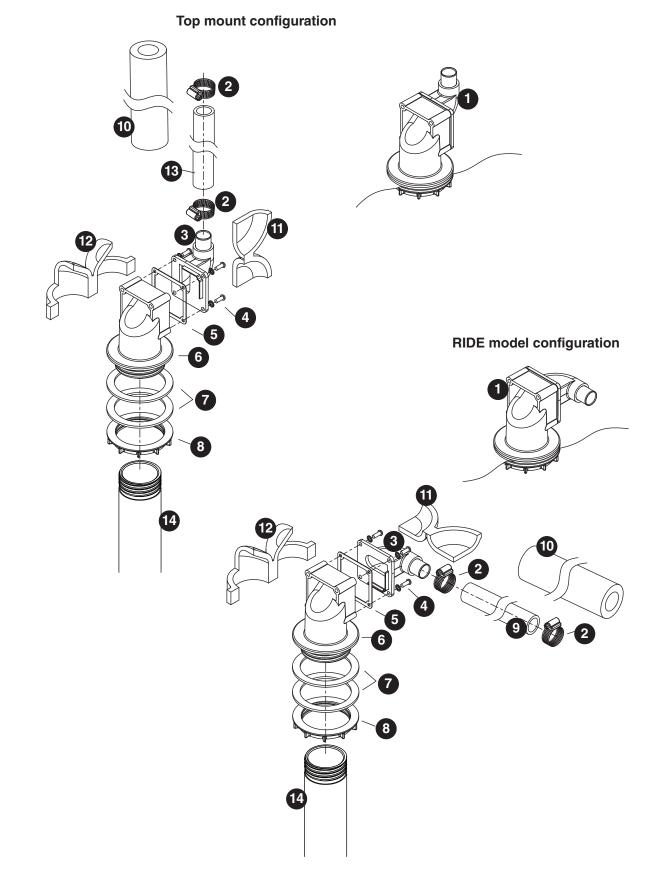

Reference #	Description	Part #
1	Shuttle actuator	00171322
2	Clamp	500377
3	Actuator elbow (includes 00167122 and 209100)	00171264
4	Screws	209100
5	Gasket	00167122
6	Actuator body	00171272
7	Gasket, coupling	00126532
8	Ring, locking (includes 00126532)	00171371
9	Ice transport tube, 10' (3m)	00171280
9	Ice transport tube, 20' (6m)	00171298
10	Insulation, transport tube	501176
Not shown	Insulated polywire ice transport tube, per foot	00174896
11	Insulation, elbow	00168922
12	Insulation, actuator	00168930
13	Ice transport tube, top mount, 30" (762mm)	00171306
14	Extension-fill tube, 9"	00135723
14	Extension-fill tube, 4"	00153684
Not shown	Integration kit, top mount, Harmony or Bin	00171389
Not shown	Integration kit, RIDE model, Harmony or Bin, (includes 10' (3m) of tube and insulation)	00171397
Not shown	Integration kit, drop in	00145334
Not shown	Integration kit, Cornelius PR150	00144774
Not shown	Integration kit, Vision (does not include ice tube)	00997171
Not shown	Diverter plate (single agitator Cornelius dispensers and left-hand dispense chute on dual-agitator Cornelius dispensers)	307277
Not shown	Diverter plate (right-hand dispense chute on dual-agitator dispensers)	00996207
Not shown	Follett SafeCLEAN Plus ice machine cleaner and sanitizer (case of 24 x 7oz packets)	01050863
Not shown	Sani-Sponge kit	00132068
Not shown	High-capacity filter system	00978957
Not shown	Primary filter (1)	00978965
Not shown	Primary filter (6)	00978973
Not shown	Pre-filter (1)	00130211
Not shown	Pre-filter (12)	00954305
Not shown	IMSII or IMSIII sanitizer concentrate - 16 oz.	00979674
Not shown	Sponge, sanitary, pack of 24	01075431

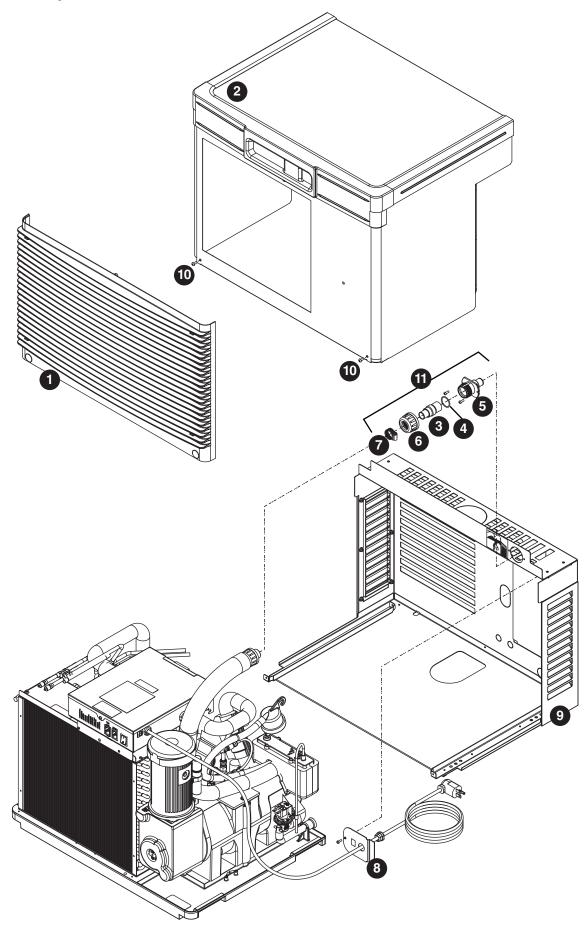

Reference #	Description	Part #
1	Grille, front	01017656
2	Front cover, air-cooled, 1010/1410	01119007
2	Front cover, water-cooled, 1010/1410	01119023
Not shown	Tubing, water, 3/8" OD	502719
3	Coupling (includes O-ring)	00171207
4	O-ring	00144675
5	Bulkhead fitting	00171215
6	Nut	00145342
7	Hose clamp	500377
8	Plate, strain relief	00192070
9	Louvered docking assembly, 1010 (includes strain relief plate, bulkhead fitting)	01119015 (1010 only)
9	Louvered docking station, 1410 (includes strain relief plate, bulkhead fitting)	01119031 (1410 only)
10	Screw	203460
11	Bulkhead connector kit	00171223
Not shown	Gasket, front cover (inside), per foot (4 feet required)	00939058
Not shown	Louver, intake/exhaust (25.75" W x17.75" H)	01080399
Not shown	Gasket, air intake (front cover, outside) (7 feet required)	00131532
Not shown	Fitting, drain	00109728

Horizon, Harmony, Ice Manager, SafeCLEAN, Sani-Sponge and Vision are trademarks of Follett Corporation. Chewblet, RIDE and Follett are registered trademarks of Follett Corporation, registered in the US.



801 Church Lane • Easton, PA 18040, USA Toll free (877) 612-5086 • +1 (610) 252-7301 www.follettice.com



Ι,